

OPERATING INSTRUCTIONS
DEMAGNETIZER/MAGNETIZER
DEM-345.00

TO DEMAGNETIZE:

1. Hold the part to be demagnetized inside and in the center of the housing opening.
2. Press the button down then slowly withdraw the part in a straight line from the housing opening for approximately three feet, keeping the part centered with the housing opening. Now release the button.

TO MAGNETIZE:

1. Hold the part to be magnetized inside and against the side of the housing opening.
2. Press the button down for four or five seconds and release.

DUTY CYCLE (INTERMITTENT):

The unit has superior field strength due to the relatively high amperage that it draws. The consequence is a fairly rapid heating of the field coil. It is recommended that a single duty cycle be limited to 5 seconds on and 3 minutes off, or three 5 second cycles on and 10 minutes off.

This unit is wired with a thermal protector. If the above duty cycles are not observed, the thermostat may open and the unit will not operate until it has cooled sufficiently. *This unit is not intended for continuous duty.*