

DIRECTIONS FOR L-G OPENALL WATERPROOF CASE WRENCH (FOR ROLEX®)


The L-G Openall Case Opener includes six tempered rings the proper sizes to open any original Rolex® watch. Simply pick the die which fits and snap it onto the top shaft (A). Be sure that it is aligned so the small pin on the shaft fits into the small pin on each die, which keeps the die from turning. (NOTE: The die will not snap onto the shaft unless the pin is properly placed in the hole.)

Remove the band or strap from the watch to be opened and adjust the jaws of the watch case holder to fit the watch loosely. Put a cloth over the jaws of the CWR-650.00 holder and place the watch face down on the cloth with the lugs of the holder between the lugs of the watch. No cloth is needed for CWR-656.00.


Gently screw down the shaft (B) of the Openall wrench until the die meshes with the small teeth on the back of the watch. Tighten it down securely with the top knob, but not enough to damage the watch. Put the T-Handle (C) into the hole provided on the main shaft and twist counter-clockwise. (We recommend trying this a few times on a junk watch if possible.) Be very careful, and if the watch offers too great a resistance, you may want to take it to a certified Rolex® dealer.

To replace the back when finished, simply reverse the above procedure. Be very careful that you do not get the back cross threaded. The back should have the proper gasket where applicable, and should be put on finger tight before applying mechanical pressure.

Your new Openall Rolex® Case Opener may be put into a vise or you can purchase a quick-change stand, which permanently attaches to your bench - ask for part number CWR-650.10.

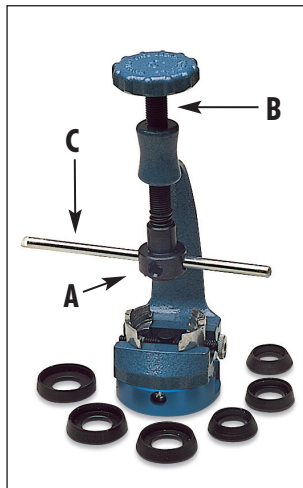

CWR-650.00
L-G "Openall" Waterproof
Case Wrench

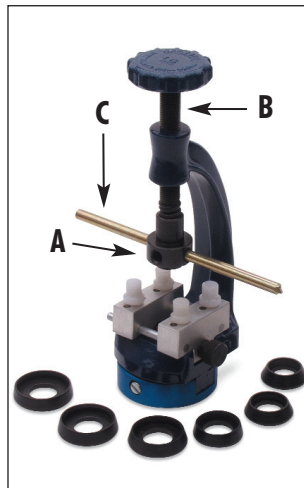

CWR-656.00
L-G "Openall" Waterproof Case
Wrench with Non-Scratch Holder